



Installation Guide

Cat 8 Shielded Toolless Keystone Jack


- 1) Remove about 3cm of the cable sheath.
Keep the cable braid (foil) about 15mm.

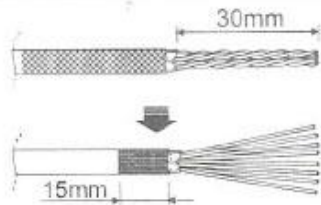


- 2) Release the cap.

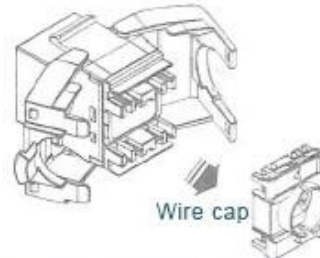


- 3) Route the cable end through the cap.
Seat each color coded wire in the matching color coded cap position.* Use a wire cutter to trim off excess wire.

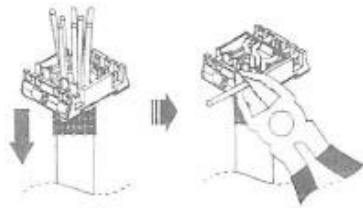

- 4) Ensure the wired cap follows relative position as the latch, and cover it with both jaws.

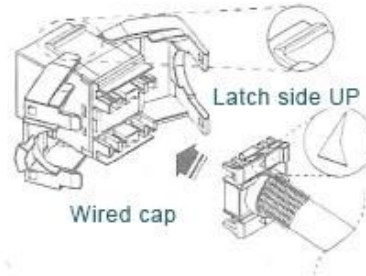

- 5) Thread the supplied cable tie through and then secure the braided shield by tightening it up and cut the cable tie.

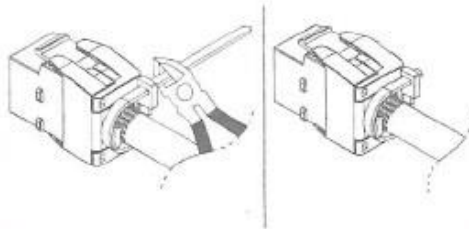


To Disconnect:

- 1) Cut the cable tie.



- 2) Insert a flat screwdriver to unlock.

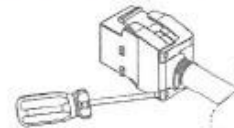

*NOTE on step 3:

Look at your wired cap, and there will be two wiring diagrams for A and B. B is the most common pin out. An example would be: Orange / White, Orange, Green / White, Green, Brown, Brown/White, Blue, Blue / White