


How to Install LC Quick Connectors

Step 1: Provide a clean cut of the fiber optic cable.

Step 2: Slip boot over cable jacket.

Step 3: Using a fiber optic cable stripper cut the cable jacket back leaving the cladding exposed. Then enough cladding to provide a cutback of 10mm for the optical glass.

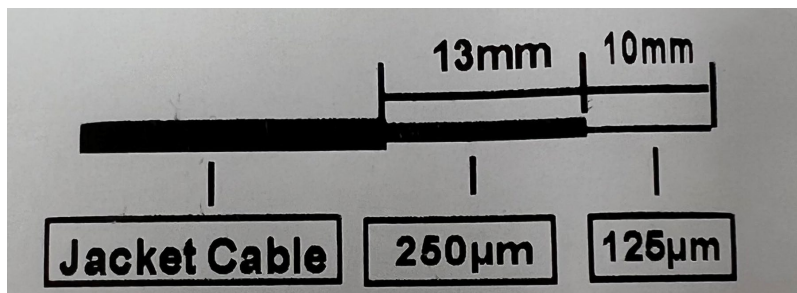


Step 4: Remove the acrylate coating using 99.9% isopropyl alcohol and a lint free wipe.

Step 5: Provide a precise cleave of the glass using a fiber optic cleaver.



Step 6: Move the locker to the bottom of the connector.

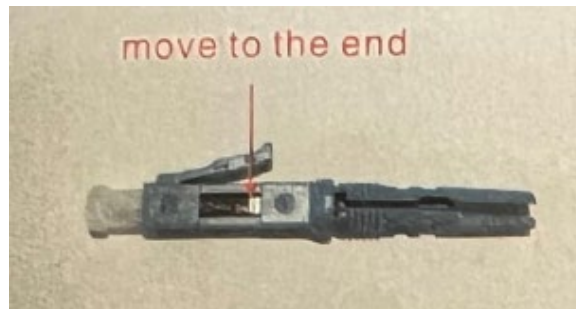

Step 6: Insert the glass into the fiber optic connector. Make sure the optic fiber is slightly curved.



Step 6: Keep the optical fiber inserted and move the locker up to lock tightly.



Step 7: Screw the end cap on.



Step 7: Finished

