


Wet-Dry Cleaning Female MPO Connectors with Sticklers® Cassette CleanClicker® End-Face Ferrule Cleaner

What is an MPO Connector?

- Multi fiber connector defined by IEC 61754-7
- Used to aggregate high fiber counts into a compact footprint
- Common fiber counts are 12 (one array) and 24 (two arrays)
- MPO connectors are used in:
 - Data center trunk assemblies
 - Interconnect to QSFP+ transceivers

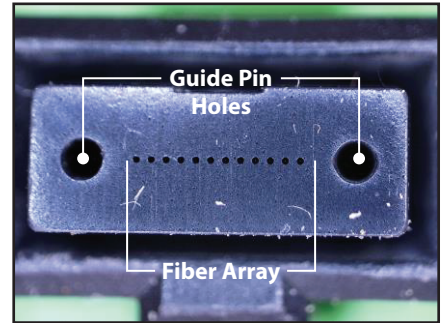

Recommended Sticklers® Fiber Optic Cleaning Products

Fiber Optic Splice & Connector Cleaner Cleaning Fluid

Part#: MCC-POC03M
NSN: 6850-01-592-9391


- Nonflammable
- Nontoxic
- Hermetically sealed
- Air ship safe
- Globally GHS compliant



Cassette CleanClicker® Ferrule End-Face Cleaner


Part#: MCC-CCWRC

- Open cleaning window and manual advancement of cleaning ribbon
- Electrostatic dissipative cleaning reduces dust contamination
- Microwoven fabric cleaning ribbon

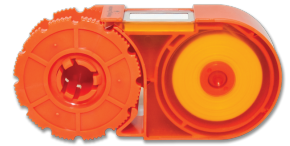


Wet-Dry Cleaning of Female MPO Connectors:


1. Advance the cleaning ribbon by turning the wheel counter-clockwise three clicks.

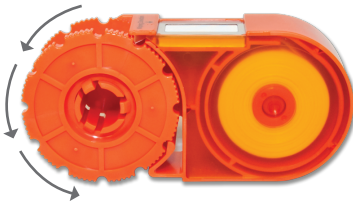

2. Insert straw into cap of cleaning fluid and wet the cleaning ribbon on the left side of the cleaning window.

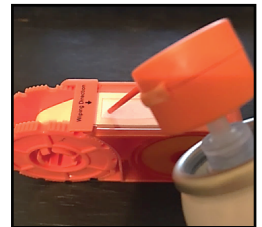

3. Place connector end-face onto wet section of cleaning ribbon. Wipe end-face from the wet to dry section left to right of the cleaning ribbon.

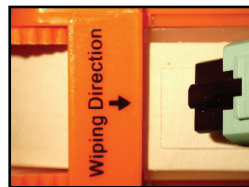

Start at Wet → Finish at Dry

For Best Results:

- Wet-dry cleaning provides best cleaning performance and eliminates electrostatic charges on the end-face
- Advance cleaning ribbon just before cleaning
- Do not oversaturate the cleaning ribbon when applying cleaning fluid
- Always wipe end-face from wet to dry
- Inspect end-face using pass-fail criteria in IEC 61300-3-35

Sticklers® Fiber Optic Cleaners Manufactured by MicroCare®

MicroCare Corporation

595 John Downey Drive
New Britain, CT 06051 USA
CAGE: OATV9
Tel: +1 860 827 0626
Toll Free: 1 800 638 0125
Email: TechSupport@MicroCare.com

MicroCare Europe Bvba

Vekestraat 29 B11
Industriezone 't Sas
1910 Kampenhout, Belgium
Tel: +32 2 251 95 05
Fax: +32 2 400 96 39
Email: EuroSales@MicroCare.com

MicroCare Asia Pte Ltd

102E Pasir Panjang Road
#03-01 Citilink Warehouse Complex
Singapore 118529
Tel: +65 6271 0182
Email: TechSupport@MicroCare.sg

*When you need perfectly
clean splices & connectors®*

www.SticklersCleaners.com