



HANDLING INSTRUCTION

FIBERFOX | Fiber Chassis Connector 2 & 4-channel



CAUTION:
Laser radiation CLASS 1. Do not look directly into beam of light!

A Chassis Connector Cleaning / Inspection

Tools:

- Distilled water
- Dust remover (Air in a can)
- STICKLERS Clean STIXX MCC-EB12 - Expanded Beam Lens



NO2M4DW-FX



NO4M4DW-FX

Disconnect both cable ends for safety reasons.

Do not stare into beams or view directly with optical instruments.

Ⓐ Remove the protection cap.




Ⓑ

Ⓒ




Ⓑ Check the lenses for contamination.

Ⓒ If there is no visible contamination.
→ No cleaning necessary.

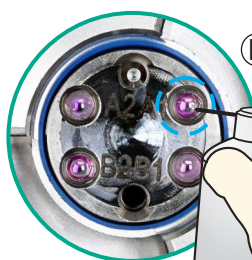

Ⓓ

Ⓓ A – small contamination:
Use the dust remover to apply air to the lenses.

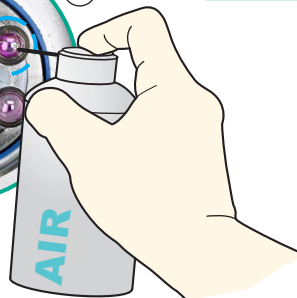



⑤

Clean STIXX



⑤


B – heavy contamination:

Moisten the tip of the STICKLERS Clean STIXX with some drops of distilled water.

⑥

NO2M4DW-FX

NO4M4DW-FX

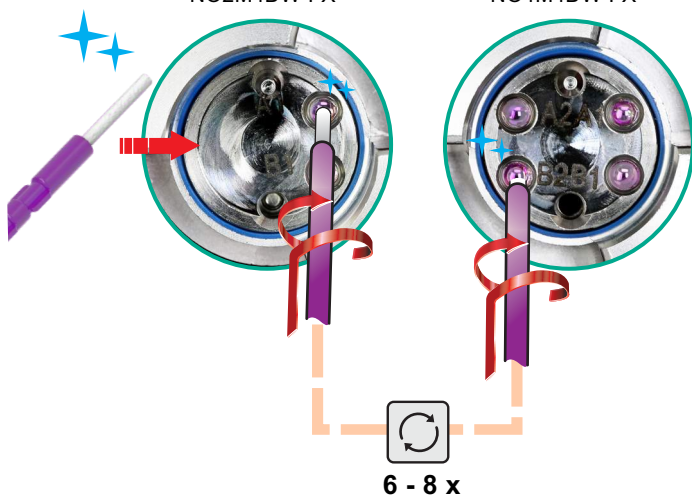

⑥

Apply the moistened tip to the lens.


Remove dust residuals by rotating the tip of the swab.

Rotate the swab six to eight times in one direction.

⑦

NO2M4DW-FX

NO4M4DW-FX

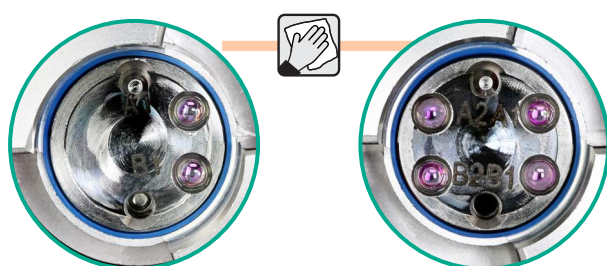

⑦

Dry the entire surface with a lint-free wipe or a similar material.

⑧



⑧

After cleaning the lenses apply the protection cap.